 



LED

REC LED : Green LED flashes while recording or error occurs.

POWER LED : Red LED lights when power is on.


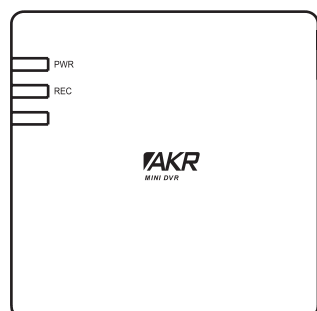


 TOP VIEW

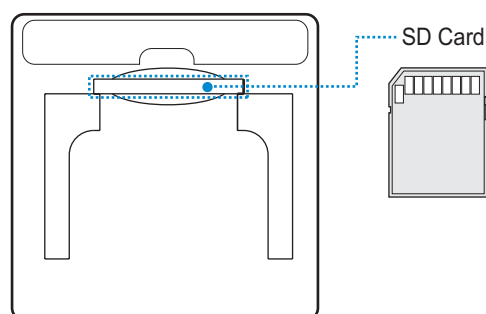


BOTTOM VIEW

  SD Card

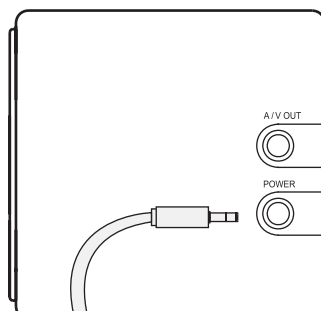


SIDE VIEW

 DC 12V

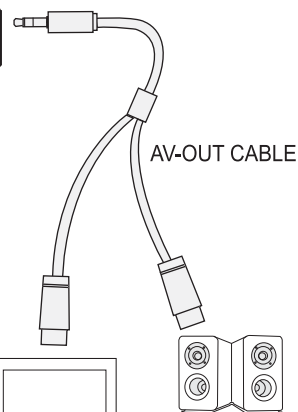

AV-OUT CABLE

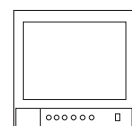 

VIDEO OUT (RCA)

AUDIO OUT (RCA)

Installation

1. Insert SD card.
2. Connect monitor (VIDEO OUT) by using RCA cable.
3. Connect speaker (AUDIO OUT) by using RCA cable.
4. Connect power cable (DC 12V) and supply power.

Remarks

- * Audio is mute on live mode, but it is activated on playback mode.
- * In case of displaying no image on the monitor, disconnect power cable and reconnect it.
- * Before inserting SD Card, it should be formatted in 'FAT32' in PC.
- * We highly recommend SanDisk (~4GB) and Transcend (~4GB) SD card.

* PASSWORD change:

OSD MENU > SUB MENU > PASSWORD CHANGE

SYSTEM SETUP
RECORDING SETUP
EVENT SETUP
SUB MENU
DEFAULT OPTION

* Refer to the manual for more details.

Recording

Make sure SD card is properly inserted into the slot.

Press the record button on the remote control in order to record.

* Refer to the manual for more details.

Menu Mode

Press 'MENU' button of the remote control in order to access OSD menu



Enter password. Default password is '0000'.

Press 'ENT' button 4 times in a consecutive way to enter the password.

MODEL : AKR-301
VERSION : 1.0
PASSWORD : 0



Playback

Play recorded files using the remote control by pressing 'search' button on the remote control.

* Refer to the next page on how to use the remote control.

* Refer to the manual for more details.

Remote Control

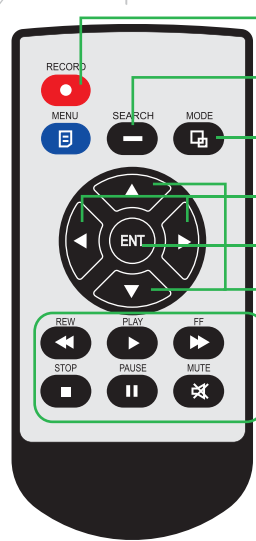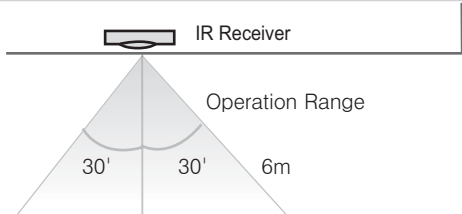

Front view

- RECORD: To start and stop recording.
- SEARCH: To view the first frame when an event occurs.
- MODE: Exit OSD Menu.
- LEFT/RIGHT: To rewind & forward.
- ENT : Select and save changed values.
- UP/DOWN: Move up and down on OSD menu.
- PLAY CONTROL: REW / PLAY / FF / STOP / PAUSE / MUTE



Rear view



* Button Cells Battery : CR2025 / 3V

Cautions

- * The remote control must be pointing at the AKR-301 and be in line of sight to work.
- * IR receiver operation range should be within 60° for horizontal angle and the distance of Max. 6m.
- * When the remote control does not work, replace its battery.