 
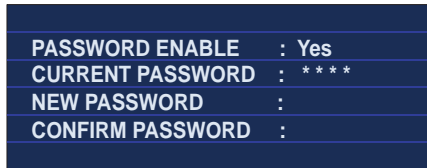 


PASSWORD Change

OSD MENU > SUB MENU > PASSWORD ENABLE

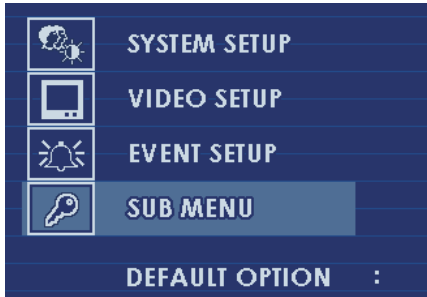

* Refer to the manual for more details.

Recording

Make sure SD card is properly inserted into the slot.

Press 'REC' button on the board or on the remote control in order to record.

* Refer to the manual for more details.

Playback

Play recorded files using the remote control

* Refer to the next page on how to use the remote control.

 
* Refer to the manual for more details.

Attention

* Do not take out the SD card or turn off MICRO-D while it is in record mode. It may damage SD card.

* When in record mode, turn off SD power by first pressing recording button for 3 seconds and then take the SD card out.

IR Receiver

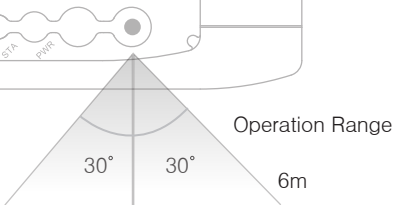

Remote Control



Front view

- RECORD: To start and stop recording.
- SEARCH: Enter Search menu.
On search menu, move to upper search menu.
- MODE: Switch between playback mode and live view mode.
- LEFT/RIGHT: REW: Fast Rewind (X2-X4-X8-X16)
FF: Fast Forward (X2-X4-X8-X16)
- ENT : On playback mode, playback at X1.
On OSD menu, enter values
- UP/DOWN: On OSD menu, chooses menu fields and change values.
On search mode, play the previous or next recorded file.
- PLAY CONTROL: REW / PLAY / FF / STOP / PAUSE / MUTE



Rear view



* Button Cells Battery : CR2025 / 3V

Cautions

- * When using the remote control, point it at IR receiver on MICRO-D
- * IR receiver operation range should be within 60° for horizontal angle and the distance of Max. 6m.
- * When the remote control does not work, replace its battery.